 

 
 

 
 














# THE 3rd HAND

 TRANSMITTER TRAY




## Parts List


Item #	Qty.	Description	*Images do not represent scale
1	1	Main Base	
2	2	Hand Rest	
3	4	Hand Rest Angle Bracket	
4	2	Lower Arm 1 left marked 'L' 1 right marked 'R'	
5	2	Upper Arm	
6	1	Main Support Angle Bracket	
7	1	Transmitter Clip	
8	1	Knob	
9	14	Plastic Washer	
10	17	#10 Metal Washer	
11	21	10-32 Nylon Lock Nut	
12	4	10-32 x 1/2" Machine Screw Round Head	
13	9	10-32 x 5/8" Machine Screw Round Head	
14	2	10-32 x 3/4" Machine Screw Round Head	
15	2	10-32 x 1" Machine Screw Round Head	
16	4	10-32 x 5/8" Machine Screw Flat Head	
17	2	Acorn Nut	
18	1	Spring	

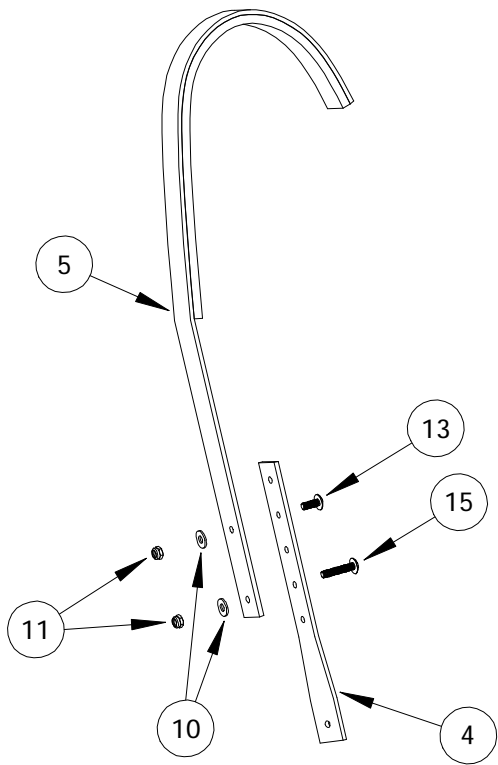


STEP 1  
(requires left and right  
to be made)

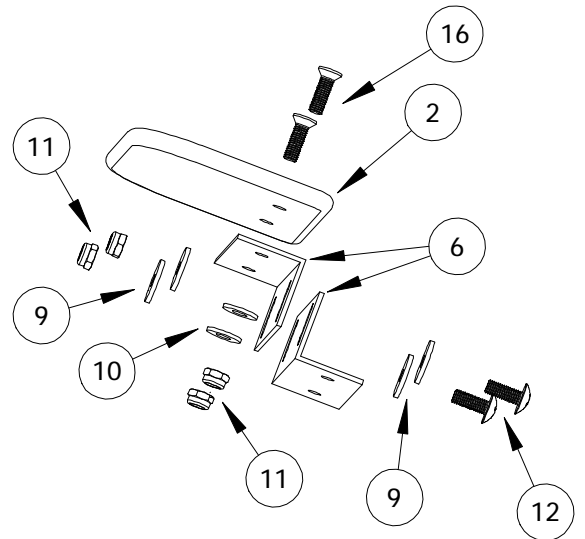

STEP 2  
(requires two)

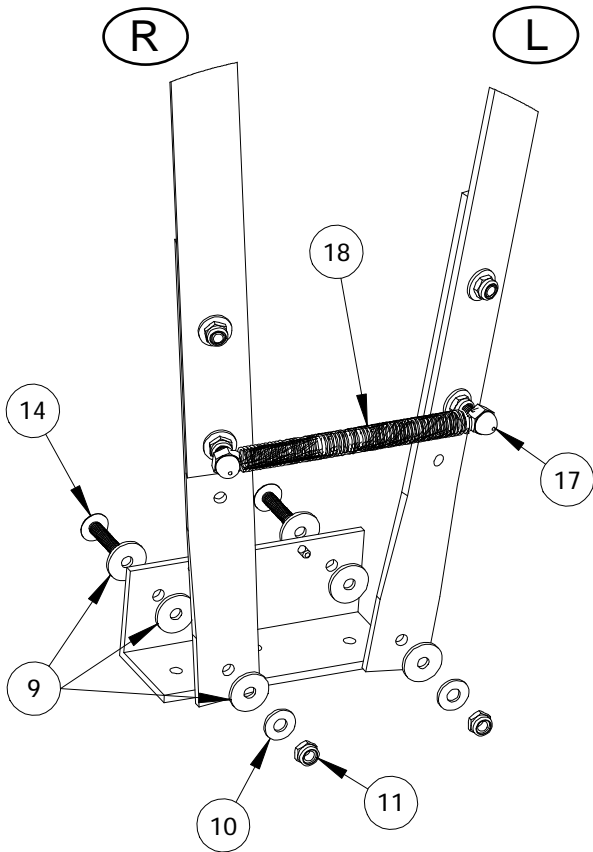

STEP 3

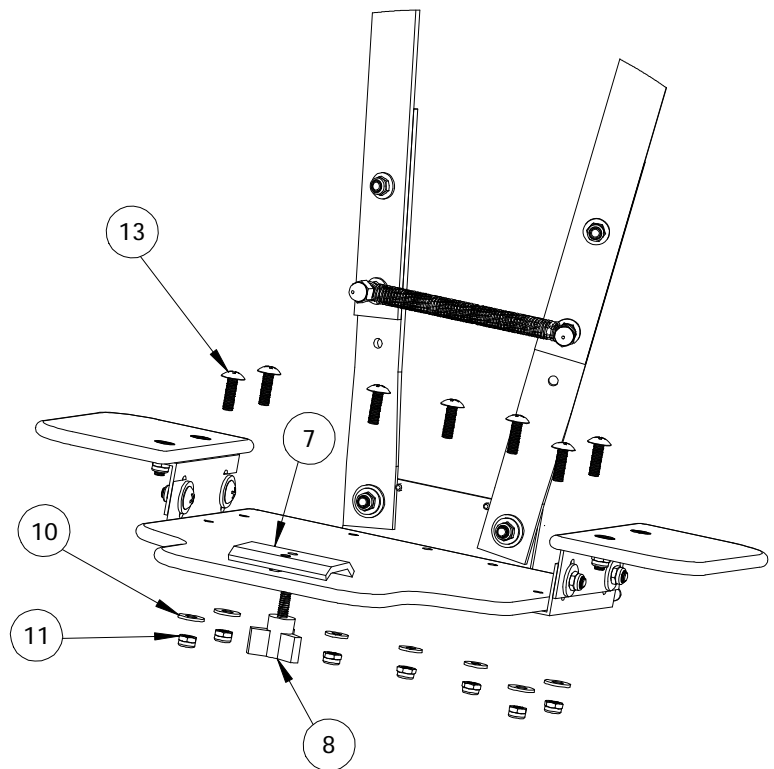

STEP 4

## Using your tray

To lock transmitter into place, first loosen knob and slide clip over handle of the transmitter (Fig. 1 below). The clip has a guide pin to assist in keeping the clip straight as you slide it. The clip can also be reversed to accommodate different transmitter positions. The side of the clip with the foam strip should tighten down over the transmitter handle. Do not over tighten as this can cause damage to transmitters with plastic handles. If the stud on the knob is not long enough to allow your handle to slide under the clip, a cut off bolt can be replaced with the installed one. A small amount of blue lock tight can be used to secure it to the knobs threaded insert.

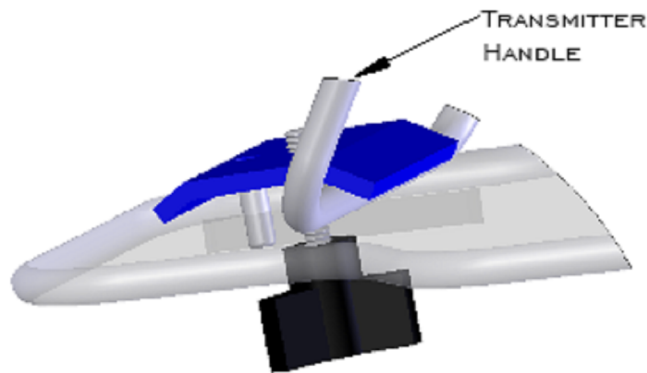


Fig 1

Hobbycutters warrants the 3<sup>rd</sup> Hand transmitter tray for 90 days from date of purchase. Warranty does not cover damage from abuse nor does it cover blemishes caused from normal use. Receipt is required for warranty claim. Please contact [service@hobbycutters.com](mailto:service@hobbycutters.com) for any claims to product. Hobbycutters assumes no liability to damage caused to either persons or property while using the 3<sup>rd</sup> Hand transmitter tray.